

29.BOW THRUSTER

Thermo autoswitch of bowthruster located in space under the bed of bow cabin.



Bowthruster and anchor has the same Switch.



To press both buttons of remote for on bowthruster for use.
maximum time of continuous operation 5 seconds