

## 220v breakers / Battery switches

1. Selector leaves on shore all times (inverter does not function).
2. Main switch leaves on all time
2. Water heating
3. Switch of 220 v outlet heads
4. Switch of 220 v outlet cabins and saloon
5. Charger



The 220 volt outlets will operate whilst you are plugged into shore power.

Shore cable main automatic switch located behind the wall hatch in port aft cabin.

