

11. Fresh water system

Yacht has a water capacity of 560 l shared between three tanks. Before filling the tank let the water run from the hose for a while before placing the end into the filler that is located on the starboard transom, middle and the bow. **Please ensure that the correct fillers are used, NOT the holding tanks, NOT the diesel tank.**

To use the fresh water system, turn on the fresh water breaker on the 12v panel and open a faucet. **When a tank run out of water and almost empty, the pump will run at high speed and the faucet will start to cough air. As soon as you hear the pump running continuously, check to see if anyone is using water. If not, switch off the pump immediately to prevent the pump from drawing more air into the system or the pump overheating.**

Use the menu key on the 12v panel to confirm if your tank is empty.

Menu Key



Valves for water tanks switch

Water pump

Shower dry pump

To switch tanks:

- Switch off water pump
- Select the next full tank: the valve is located under the sink in the starboard aft head.
- Switch on water pump.
- Open cold water faucet at galley and purge system of air, approx. 45 seconds
- Turn off faucet, pump will continue to run until adequate pressure has built up to operate pressure switch to cut the pump out.
- If pump does not cut out, it may be necessary to repeat the purging process and open other faucets
- If you have any problems, call technical support.