

## 19. BILGE WATER SYSTEM

The bilge strainer is located under the saloon floor. Lifting the boards in front of the companionway will allow you access to the bilge pump via a bilge strainer.

To check the bilge pump operation press the bilge switch on the electrical panel on "manual" position. For checking in automatic operation turn switch on "automatic" and lift the bilge float by hand. You will hear the pump performance in the case of the present of water in the bilge check the outflow.

**CAUTION:** Check the bilge pump for bilge water before leaving the dock, during sailing and when leaving the boat for a longer period.  
Switch on the bilge water pump switches on the control panel and check the operation of the bilge pump.



Bilge pump switch



Manual bilge pump



Handle of manual bilge pump