

## 18.HEAD AND WASTE SYSTEM

Sea water is used for flushing the toilets. The toilets are flushed with a manual pump that is built into the toilet. The waste water from the toilets is emptied via outlet seacocks or via waste tank.

**CAUTION:** Nothing is to be put down the head included all kind of paper to be kept in plastic bags.

**Prior to use, move the lever to wet bowl to add water - 4/6 pumps.**

**Pump out waste in the wet bowl position ; this must be done when you are more than 300 m off shore!**

**After the bowl has been cleared of it's contents, an additional 20 - 25 pulls on 'wet' bowl will flush the bowl and pipes and will keep your heads smelling fresh.**

**Move lever back to dry bowl and pump the bowl and pipes dry, the lever must be left in dry bowl as leaving it in wet bowl will ingress water.**

**Wherever possible please use the marina's WC as this keeps our waters nice and clean.**

**When you stay on anchor or buoy close the WC valve outlet located behinde the door under the sink . 130 l waste tank will concume all from wc.**

**Blocked heads will be cleared at a cost to you of eur200.00.**

Valve must be open during waste pumping



Handle to switch between waste tank and sea



Switch on to release waste tank



Wast pump