

21. BOW THRUSTER

Bowthruster located in space under the bed of bow starboard cabin.

Bowthruster switch



Remote control of bowthruster Quick (maximum time of continuous operation 5 seconds).



Bowthruster fuse and battery located in first under the bad space.

